
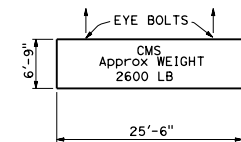


PLAN

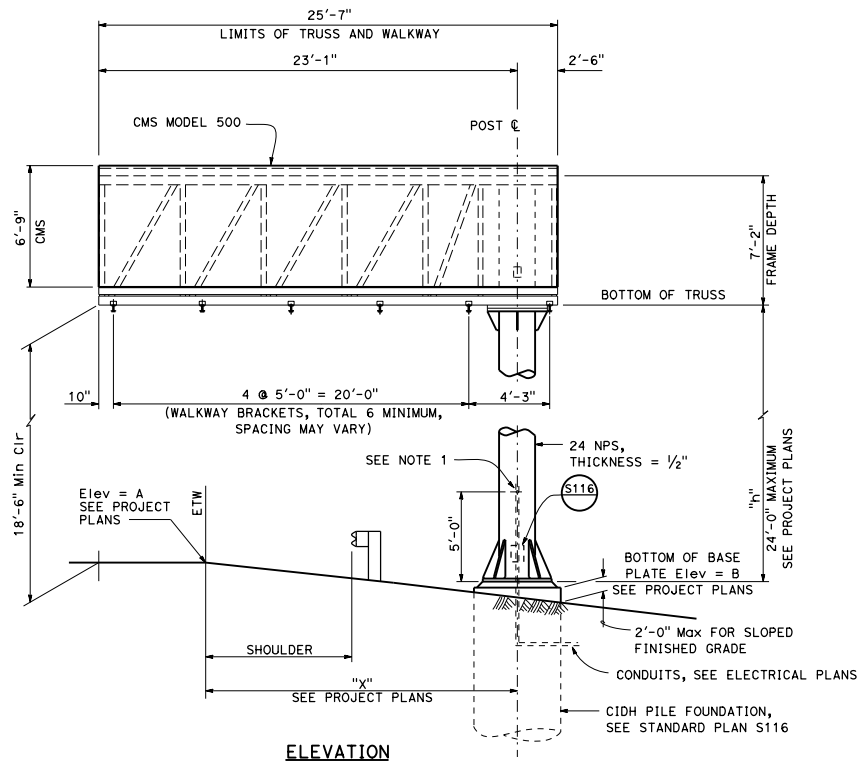

LIFTING DIAGRAM

NOTES:

1. Drill and tap for 2 1/2" recessed pipe plug.
2. For location and elevation of sign structure see Project Plans.
3. Sign support post shall be raked out of plumb with leveling nuts to make the bottom of the sign frame level.
4. At final position of post, top and bottom nuts shall be tightened against base plate.
5. For "General Notes", see Standard Plan S101.

STATE OF CALIFORNIA
DEPARTMENT OF TRANSPORTATION

**OVERHEAD SIGN-TRUSS
SINGLE POST TYPE
LAYOUT
FULL CANTILEVER
CHANGEABLE MESSAGE SIGNS
MODEL 500**

NO SCALE

S109

DIST	COUNTY	ROUTE	POST MILES TOTAL PROJECT	SHEET No.	TOTAL SHEETS

October 30, 2015
PLANS APPROVAL DATE

REGISTERED CIVIL ENGINEER

Jeffrey B. Woody
No. C41260
Exp. 3-31-17
CIVIL
STATE OF CALIFORNIA

THE STATE OF CALIFORNIA OR ITS OFFICERS OR AGENTS SHALL NOT BE RESPONSIBLE FOR THE ACCURACY OR COMPLETENESS OF SCANNED COPIES OF THIS PLAN SHEET.